


**FOR YOUR SAFETY** - This product must be installed in accordance with the procedures in this manual, local codes and ordinances, and in accordance with the latest edition of the National Fuel Gas Code, ANSI Z223.1. In Canada, the installation must be in accordance with CAN1-B149.1 or .2 and local codes. **Improper installation and/or operation could create carbon monoxide gas in flue gases which could cause serious injury, property damage, or death. Improper installation and/or operation will void the warranty.**

## Installation and Operation Manual

### Hot Shot® Above Ground Pool and Spa Heater

**Model LHS  
Natural Gas or LP Gas  
For Outdoor Use Only**

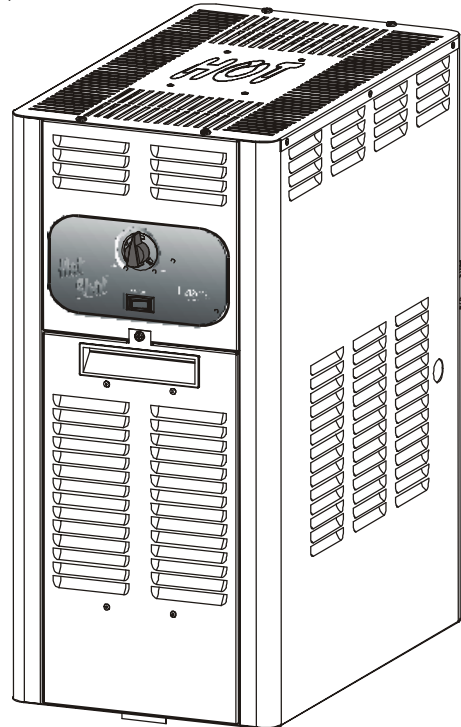

**⚠ WARNING:** If these instructions are not followed exactly, a fire or explosion may result, causing property damage, personal injury, or death.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

#### WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a nearby phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

---

## TABLE OF CONTENTS

### SECTION 1.

#### General Information

1.1	Introduction .....	1
1.2	Description .....	1
1.3	Warranty .....	2
1.4	Technical Assistance .....	2

### SECTION 2.

#### Installation Instructions

2.1	General Information .....	2
2.2	Field Assembly .....	2
2.3	Site Location .....	2
2.3.1	Installation Information .....	2
2.3.2	Outdoor Installation .....	2
2.4	Gas Supply and Piping .....	3
2.4.1	General Instructions .....	3
2.4.2	Special Precautions for Propane Gas .....	4
2.5	Water Flow System .....	4
2.5.1	Flange Installation .....	4
2.5.2	Valve Installation .....	5
2.5.3	Water Chemistry .....	5
2.5.4	Adjusting the Pressure Switch .....	5
2.5.5	Automatic Flow Control Valve .....	7
2.5.6	Wiring Diagram .....	6

### SECTION 3.

#### Operating Instructions

3.1	General Information .....	7
3.2	Lighting and Shutdown Procedures .....	9
3.3	Setting the Temperature Control .....	9
3.4	Seasonal Care .....	9
3.4.1	Spring and Fall Operation .....	9
3.4.2	Winterizing .....	9
3.4.3	Spring Startup .....	9
3.5	Swimming Pool Energy Saving Tips .....	9
3.6	Periodic Inspection .....	10
3.6.1	Owner Inspection .....	10

### SECTION 4.

#### Parts List for Laars Lite 2 Heater

41	General Information .....	10
42	Parts List .....	10
43	Exploded View .....	11
	Warranty .....	Back Cover

## SECTION 1. General Information

### 1.1. Introduction

This manual provides installation and operation instructions for the Jandy® Hot Shot®, model LHS above ground pool heater. Read these installation and operation instructions completely before proceeding with the installation. Consult the Jandy factory, or local factory representative, with any questions regarding this equipment. Experience has shown that most operating problems are caused by improper installation.

The Jandy Hot Shot heater is design certified by the CSA, International (Canadian Standards Association) as complying with the latest edition of the Unified Standard for Gas-Fired Pool Heaters, ANSI

Z21.56 in the United States, and CAN1-4.7-M85 in Canada.

Certain sections of this manual are specific to either United States or Canadian installations, and are labeled as such.

### 1.2. Description

The Jandy Hot Shot heater is specifically designed for heating above ground, fresh water swimming pools. Do not use it as a general service water heater. There are specially designed models of Jandy pool heaters for heating in ground pools and salt water pools. An accessory kit is available so that temperature rise may be measured and adjusted for spa applications. Consult your dealer for the appropriate Jandy products for these applications.

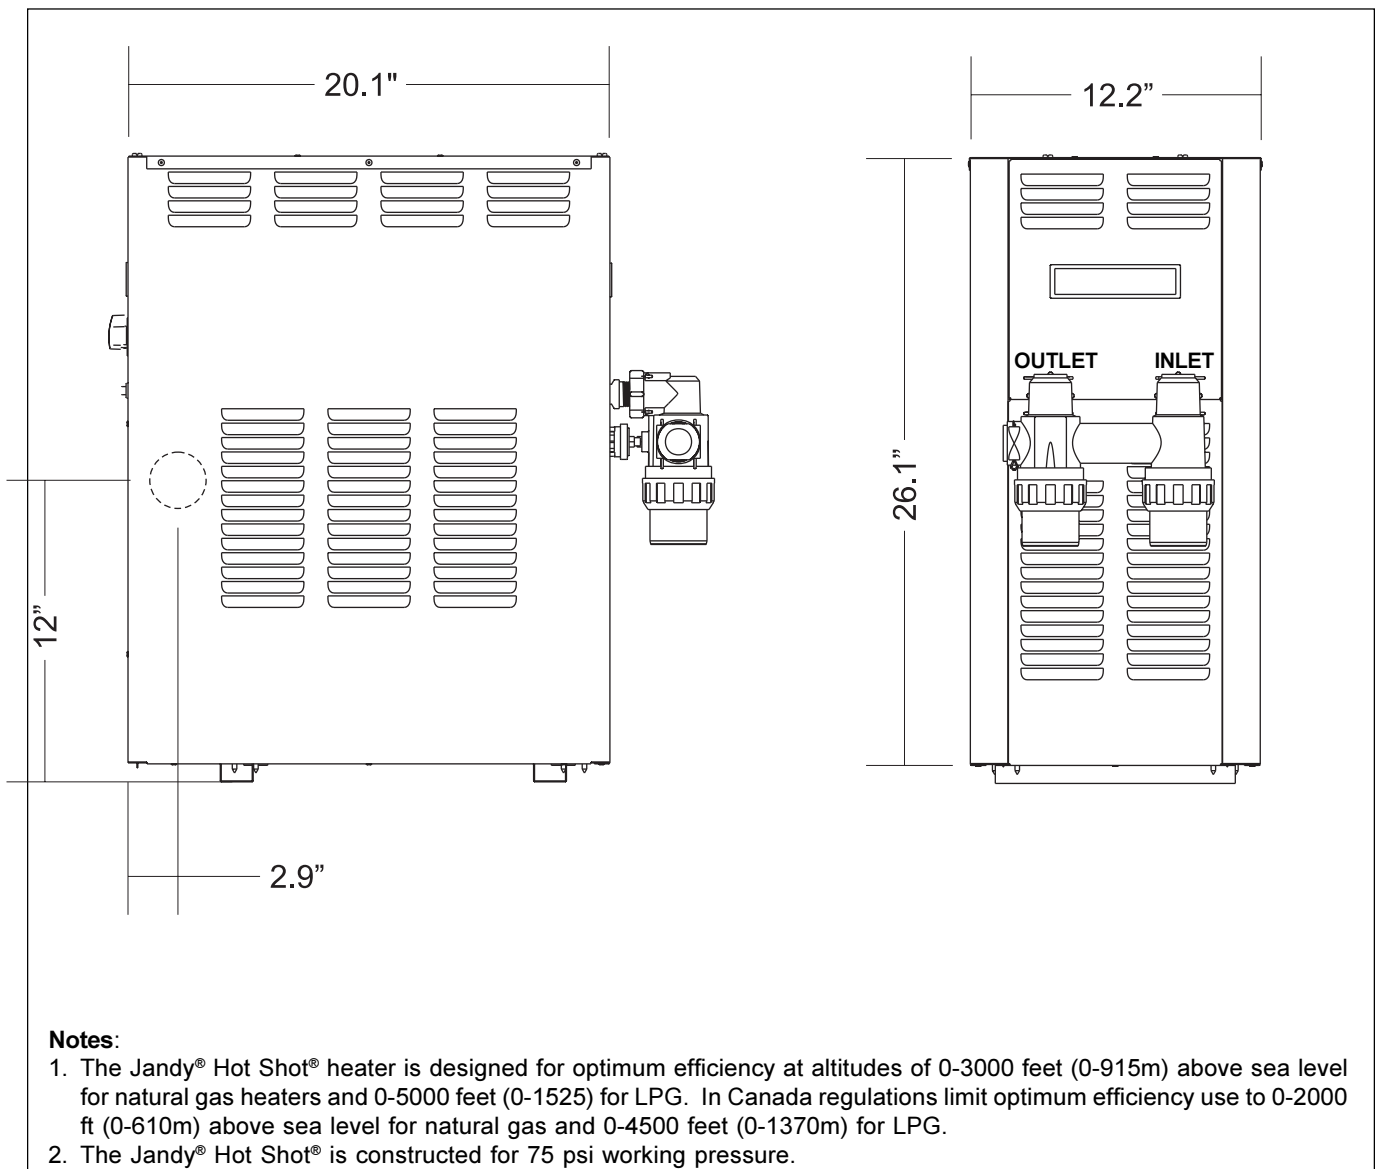


Figure 1. General Configuration.

### 1.3 Warranty

The Jandy Hot Shot heater is sold with a limited factory warranty. Details are specified on page 14 of this manual.

Make all warranty claims to an authorized Jandy representative or directly to the factory. Claims must include the heater serial number and model (this information can be found on the rating plate), installation date, and name of the installer. Labor and shipping costs are not included in the warranty coverage.

Damage caused by improper installation or assembly, or to the heat exchanger by corrosive water, is NOT covered by the Warranty. See Section 2.5.3 for maintaining proper pool water chemistry.

**NOTE:** Keep this manual in a safe place for future reference when inspecting or servicing the heater.

### 1.4 Technical Assistance

Consult the Jandy factory or your local distributor of Jandy products with any questions or problems involving the specifications, installation, and operation of your Jandy equipment. An experienced technical support staff is ready to assist in assuring the proper performance and application of Jandy products. For technical support call (707) 776-8200.

## SECTION 2. Installation Instructions

### 2.1 General Information

Install the Jandy Hot Shot heater in accordance with the procedures in this manual, local codes and ordinances, and in accordance with the latest edition of the National Fuel Gas Code, ANSI Z223.1. In Canada, the installation must be in accordance with CAN1-B149.1 or .2 and local codes. Any changes to the heater, gas controls, gas orifices, wiring, or improper installation may void the warranty. If field conditions require change to any of the above, consult the factory.

All gas-fired products require correct installation to assure safe operation. The requirements for pool heaters include the following:

1. Field assembly (if required)
2. Appropriate site location (clearances)
3. Sufficient combustion and ventilation air
4. Properly sized gas meter and piping
5. Adequate water flow


This manual provides the information needed to meet these requirements. Review all application and installation procedures completely before continuing the installation.

### 2.2 Field Assembly

The Jandy Hot Shot heater is shipped from the factory ready for outdoor installation in the U.S. and Canada.

The only preparation needed is the connection for the gas line and the water connection.

### 2.3 Site Location

 **WARNING**

Improper installation or maintenance can cause nausea or asphyxiation from carbon monoxide in flue gases which could result in severe injury, or death.

#### 2.3.1. Installation Information

All Hot Shot pool heaters are designed and certified for installation on a combustible floor. For added safety, Water Pik Technologies, Inc.™ recommends placing the heater on a cement or other non combustible surface. Ensure that the heater is level from all sides. NEVER store objects on or around the heater. The heater must NEVER be installed on any type of carpeting.

Avoid placing the heater in locations where it can cause damage by water or condensate leakage. If this is not possible, provide a suitable drain pan to catch and divert any leakage. The pan must not block natural flow of air around the heater.


Locate the heater so the clearances from combustible surfaces shown in Table 1 are met.

**Table 1. Minimum Heater Clearances From Combustible Surfaces**

Side of Heater	Distance From Combustible Surface	
	Inches	Centimeters
Sides	4	10
Piping (Rear)	12	30
Top	Open Unroofed Area	
Front	18	45

#### 2.3.2 Outdoor Installation

Jandy Hot Shot heaters are design certified only for outdoor installation. The heater should be installed as received from the factory, in accordance with this manual and following all federal, state and local codes. Any attempt to modify the heater may cause personal injury, property loss or death and will void the warranty.

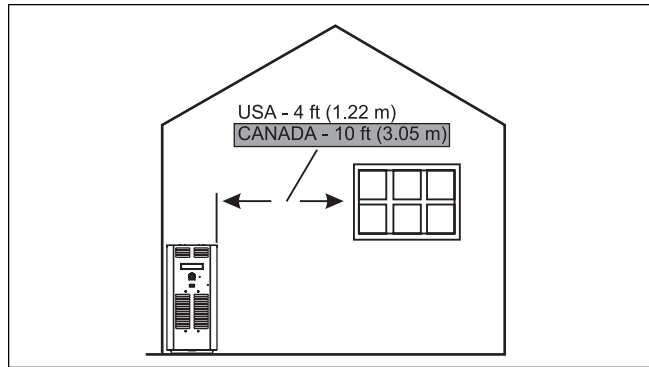

**Figure 2. Outdoor Heater Installation.**

Locate the heater in an **open, unroofed area**. Do not install the heater under a deck. Do not locate the heater below or adjacent to any doors, glass openings, louvers, grills, etc., which connect in any way with an inhabited area of a building, even though the access might be through another structure (e.g., a garage or utility room). In the United States there must be a minimum of 4 feet (1.2 m) horizontally or vertically between the heater and any door, glass opening, or gravity inlet to a building. In Canada this distance must be at least 10 feet (3.0 m) (see Figure 2).

Be sure that the heater is installed away from traffic areas such as walkways or pool ladders. It is recommended that the heater be enclosed by protective fencing to prevent accidental contact with hot surfaces.

<p><b>⚠ WARNING</b> <b>United States</b></p> <p>Do not install the heater with the top within 4 feet (1.2 m) of any opening into a building.</p>
<p><b>Canada</b></p> <p>Do not install the heater with the top within 10 feet (3.0 m) of any opening into a building.</p>

If the heater is installed under an overhang, there must be a minimum clearance of 5 feet (1.5 m) above the top of the heater and the structure should not overhang the heater more than 12 inches (0.3 m). The area under the overhang must be open on three sides. This prevents combustion gases from being diverted into living areas through doors, windows, or gravity inlets.

If the heater is installed close to a structure, protect it from rain water runoff with rain gutters on the roof or other measures. Do not locate the heater near sprinkler systems that could spray water on it. Be sure to locate the heater where oversplash from the pool will not damage the heater.

Avoid locations where wind deflection off nearby structures might cause downdraft conditions. Where downdraft conditions exist, locate the heater at least 3

feet (0.9 m) from vertical surfaces (e.g., nearby buildings and walls).

<p><b>⚠ WARNING</b></p> <p>Jandy Hot Shot heaters are design certified only for outdoor installation. Any attempt to modify the heater for any other use may cause personal injury, property damage or death and will void the warranty.</p>
--

## 2.4 Gas Supply and Piping

### 2.4.1 General Instructions

Review the following general instructions before continuing the installation.

<p><b>⚠ WARNING</b></p> <p>Do not convert this heater from natural gas to propane gas, or propane to natural. Field conversion could create carbon monoxide gas which can cause property damage, serious injury, or death.</p>
--

1. Gas piping installation must be in accordance with the latest edition of ANSI Z223.1 and all local codes. In Canada, the installation must be in accordance with CAN- B149.1 or .2 and all local codes that apply.
2. Check the rating plate to make sure the heater is fitted for the type of gas being used. Jandy heaters, as shipped from the factory, are certified to operate within a specific altitude range.
  - a) In the United States, the altitude range specified is 0 to 3000 feet (0 to 915 m) above sea level for natural gas and 0 to 5000 feet (0 to 1525 m) for propane gas.
  - b) In Canada, the heater rating plate is marked for specific altitude requirements: 0 to 2,000 feet (0 to 610 m) above sea level for natural gas and 0 to 4500 feet (0 to 1370 m) for propane gas.
3. Use the figures in Table 2 to size the gas inlet piping from the gas meter to the heater. Check all local codes for compliance before installing the heater.
4. Install a sediment trap (drip leg) ahead of the gas controls (see Figure 3). Fit the trap with a threaded cap which can be removed for cleaning.
5. Install an CSA approved manual gas shutoff valve on the outside of the heater jacket for service and safety. Do not use a restrictive gas cock.


**Table 2. Natural Gas Pipe Size Requirements**

Distance from Gas Meter		
0-50 feet (0-15 m)	50-100 feet (15-30 m)	100-200 feet (30-60 m)
in. (mm)	in. (mm)	in. (mm)
3/4 (19)	1 (25.4)	1 (25.4)

**Notes:**

1. These numbers are for natural gas (0.65 Sp. Gr.) and are based on 1/2 inch (13 mm) water column pressure drop. Check supply pressure with a manometer, and local code requirements for variations.
2. Check supply pressure and local code requirements before proceeding with work.
3. Pipe fittings must be considered when determining gas pipe sizing.

**NOTE:** For LP gas use a minimum pipe size of 3/4 inch diameter pipe and a minimum 60 lb cylinder. For best results, Water Pik Technologies recommends a 100 lb cylinder.

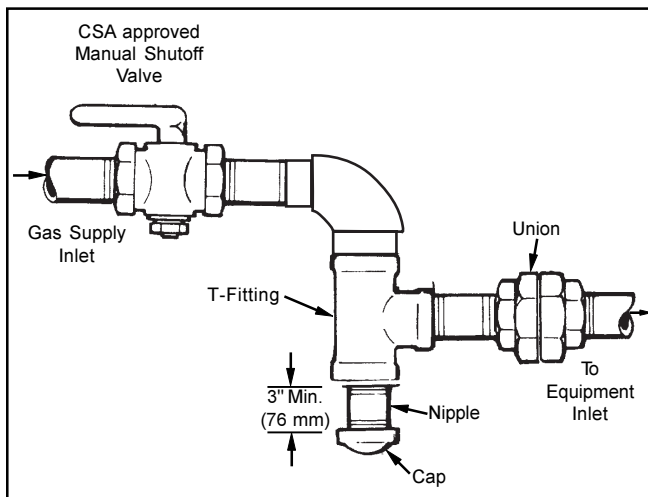

**Figure 3. The proper design for a sediment trap / drip leg.**

**⚠ WARNING**

The use of a flexible connection is not recommended as they cause high gas pressure drops.

6. Disconnect the heater and its individual shutoff valve from the gas supply system during pressure testing of the system at pressures higher than 1/2 pounds per square inch (psi) (3.45 kilopascals [kPa]). If the test pressure is equal to or less than 1/2 psi (3.45 kPa), close the manual shutoff valve on the heater during the pressure test.

**⚠ Caution**

Permanent damage to the gas valve will occur if the following procedures are not followed.

**Table 3. Gas Supply Pressure Requirements**

Supply Pressure Water Column	Natural Gas	Propane Gas
	"W.C.	"W.C.
Minimum	5.0	11.0
Maximum	10.0	14.0

7. If the gas supply pressure is less than required, check for undersized pipe between the meter and the heater, a restrictive fitting, or an undersized gas meter. Gas supply pressures to the heater are listed in Table 3.

**NOTE:** The maximum inlet gas pressure must not exceed the specified value. The minimum value listed is for the purpose of input adjustment. Refer to Table 3.

8. Before operating the heater, test the complete gas supply system and all connections for leaks using a soap solution. Do not use an open flame.

**⚠ Caution**

Some leak test solutions (including soap and water) may cause corrosion or stress cracking. Rinse the piping with water after testing.

**2.4.2 Special Precautions for Propane Gas**

**⚠ Caution**

Liquefied petroleum (LP) gas is heavier than air. Therefore, do not install pool heaters using LP gas in pits or locations where gas might collect. Locate heaters a safe distance from LP gas storage and filling equipment. Consult local codes and fire protection authorities about specific installation restrictions.

**2.5 Water Flow System**

**2.5.1 Flange Installation**

The water inlet/outlet header has connections designed for 1 1/2" PVC schedule 40 pipe.

To install schedule 40 PVC (see Figure 4):

1. Use the PVC primer on the outside of the PVC pipe only.
2. Allow the primer to dry completely.
3. Clean and dry the inside of the header coupling tailpipe.

- Use a multi-purpose cement (label will indicate for use on ABS *and* PVC) on the outside of the PVC pipe **only** and glue the PVC pipe to the header coupling tailpiece. Follow the cement manufacturer's recommendations for curing and drying times.

Note: Due to various diameters of filter system flexible hose, PVC reducers are not supplied with this heater.

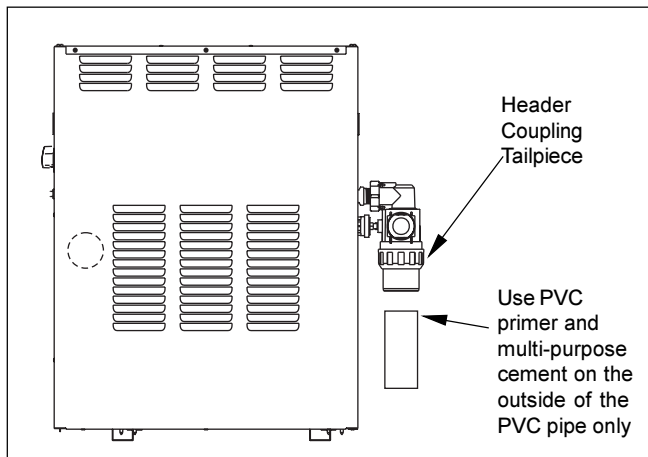


Figure 4. Attach PVC Pipe To The Header Tailpipe.

To install flexible plumbing (see Figure 5):

- Use the PVC primer on the outside of the barbed PVC reducer **only**.
- Allow the primer to dry completely.
- Clean and dry the inside of the header coupling tailpiece.
- Use a multi-purpose cement (label will indicate for use on ABS *and* PVC) on the outside of the barbed PVC reducer **only** and glue the barbed PVC reducer to the header coupling tailpiece. Follow the cement manufacturer's recommendations for curing and drying times.
- Use a hose clamp to attach the flexible plumbing to the barbed PVC reducer.

### 2.5.2 Check Valve Installation

Install a check valve if there is any chance of back-siphoning when the pump stops. Do not install any other valve in the piping between the heater outlet and the pool, unless it is being used as a diverter valve.

### 2.5.3 Water Chemistry

Proper chemical balances are necessary for sanitary bathing conditions as well as ensuring your heater's long life. Be sure to keep your chemical levels

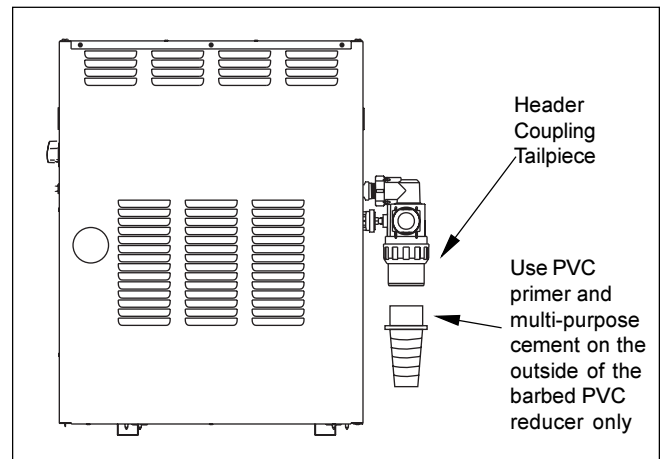


Figure 5. Attach PVC Reducer To The Header Tailpipe.

within the values indicated in Table 4. **Water Pik Technologies does not warrant heat exchangers damaged by corrosive chemical levels or excess dissolved solids in pool water.**

Table 4. Mineral Concentration Levels

Test	Recommended Level
Free chlorine	1.0 to 3.0 ppm
Bromine	3.0 to 5.0 ppm
pH	7.2 to 7.8
Total alkalinity (TA)	80 to 120 ppm
Calcium hardness (CH)	200 to 400 ppm
Langelier saturation index (LSI)	-0.5 to +0.5
Total dissolved solids (TDS)	Less than 2000 ppm
Cyanuric acid	30 to 150 ppm
Copper	0 ppm

### 2.5.4 Adjusting the Pressure Switch

#### **Caution**

The pressure switch should be adjusted to turn the heater off when the pump is off. Setting the switch to close at too low of a flow can damage the appliance. Adjust the switch to turn the heater off, not on.

The pressure switch is preset at the factory for activation at 2 psi (14 kPa). Adjust the pressure switch only if any part of the filter system piping is 3 feet (0.9 m) or more above the top of the heater jacket.


Do not adjust the pressure switch if the heater is installed more than 15 feet (4.5 m) below or 6 feet (1.8 m) above the pool surface. Consult your local Jandy representative for recommendations.

2.5.6. Wiring Diagram

# HOT SHOT HEATER WIRING DIAGRAM



## Connection Diagram

- BK - Black
- W - White
- Y - Yellow
- R - Red
- O - Orange

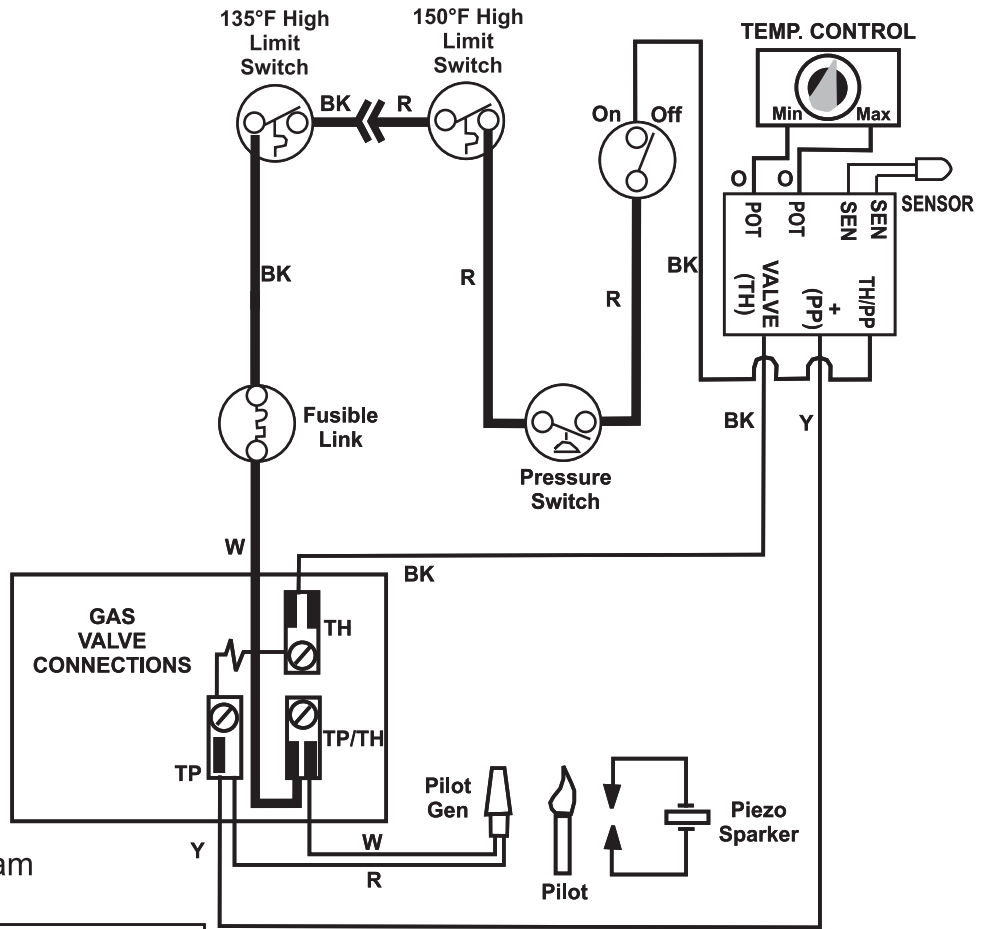

A) Connection Diagram

IF ANY OF THE ORIGINAL WIRE AS SUPPLIED WITH THE HEATER MUST BE REPLACED, APPLIANCE WIRING MATERIAL RATED FOR 105°C MUST BE USED. WHERE MARKED THUS **APPLIANCE WIRING MATERIAL FOR 200°C MUST BE USED.**

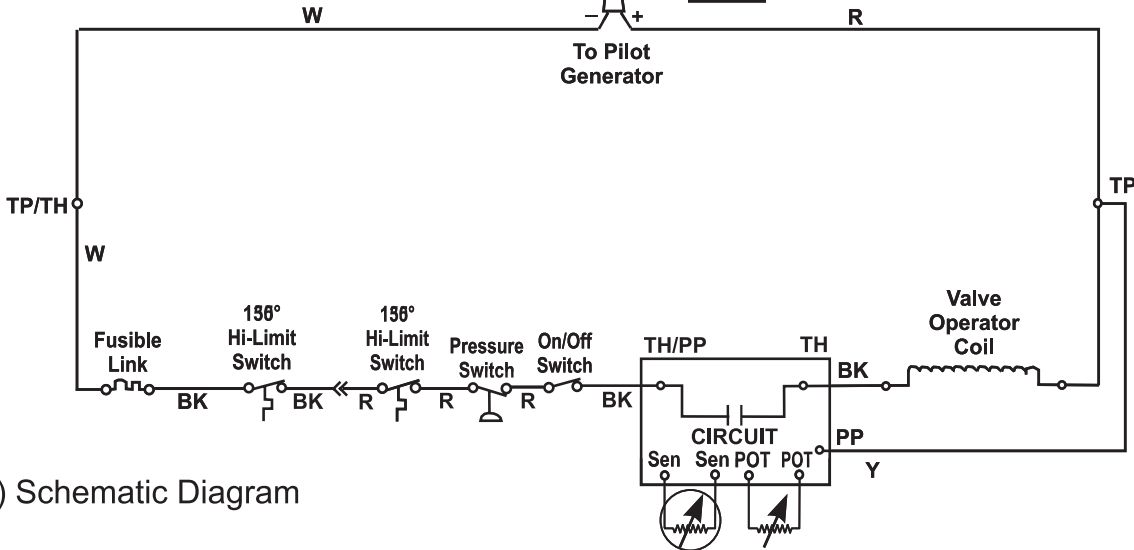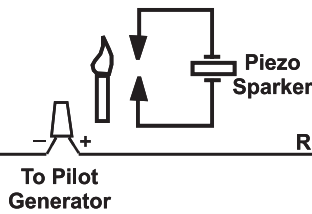

B) Schematic Diagram

Figure 8. LHS Connection/Schematic Wiring Diagram.

On some installations, the piping from the heater to the pool is very short. The back pressure could be too low to trigger the pressure switch. If this happens, it may be necessary to install a directional fitting or elbows where the return line enters the pool. This will increase back pressure enough for the heater to operate properly.

Make sure the pool filter is clean before making any pressure switch adjustment: A dirty filter will restrict the water flow and the pressure switch cannot be adjusted properly. To adjust the pressure switch:

1. Set the control panel rocker switch to the OFF position (see Figure 6).
2. Set the temperature control to the HIGH position.
3. Turn filter pump on.
4. Turn rocker switch to ON. Heater should start.
5. Pry out the top rubber dust plug on the top of the pressure switch.
6. Use a 7/32 inch (5.55 mm) Allen wrench to turn the adjustment screw very slowly clockwise until the heater goes off (see Figure 7).
7. Slowly turn the pressure switch adjustment screw **counterclockwise** one-quarter turn. The heater should come back on.
8. Check the adjustment by turning the filter pump OFF. The heater should shut off immediately. If it does not, restart the filter pump immediately and repeat Steps 6 and 7. Check the adjustment again.
9. Return the pool temperature control to the desired temperature.



Figure 6. Temperature Control Panel.

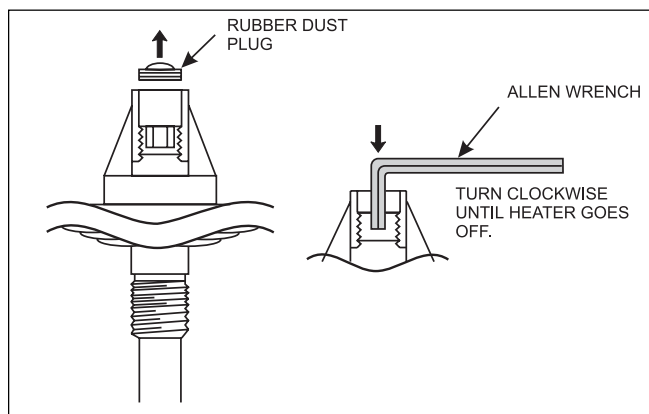


Figure 7. Pressure switch adjustment.

### 2.5.5 Automatic Flow Control Valve

The flow control valve automatically maintains the proper flow through the system.

## SECTION 3. Operating Instructions

### 3.1 General Information

With any new pool or spa installation, and at spring startup, operate the filter pump with the heater off long enough to completely clean the water. This will remove any installation residue from the water. Clean the filter at the end of this operation before starting the heater.

#### ⚠ Caution

Do not use this heater if any part has been under water. Immediately call a qualified service technician to inspect the heater and replace any part of the control system and any gas control which has been under water.

#### ⚠ Attention

N'utilisez pas cet appareil s'il a été plongé dans l'eau, même partiellement. Faites inspecter l'appareil par un technicien qualifié et remplacez toute partie du système de contrôle et toute commande qui ont été plongés dans l'eau.

#### ⚠ Caution

Should overheating occur or the gas supply fail to shut off, turn off the manual gas control valve to the heater.

#### ⚠ Attention

En cas de surchauffe ou si l'alimentation en gaz ne s'arrête pas, fermez manuellement le robinet d'arrêt de l'admission de gaz.

#### ⚠ Caution

Keep all objects off the top of the heater. Blocking air flow could damage the heater, and may void the warranty.

#### ⚠ WARNING

For your safety, when starting the heater, stand away from the front of the heater and keep your head and face well away from the firebox opening to prevent any risk of personal injury.

## Water Pik Technologies Inc.



### FOR YOUR SAFETY READ BEFORE OPERATING





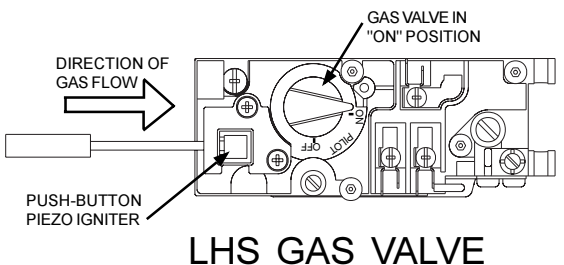
**⚠️ WARNING:** If you do not follow these instructions exactly, a fire or explosion may result, causing property damage, personal injury or loss of life.

- A. This appliance has a pilot which must be lighted by a push button sparker. When lighting the pilot, follow these instructions exactly.
- B. BEFORE OPERATING, smell all around the appliance area for gas. Be sure to smell next to the floor because LP gas is heavier than air and will settle on the floor.
 



**WHAT TO DO IF YOU SMELL GAS**

  - Do not try to light any appliance
  - Do not touch any electric switch; do not use any phone in your building.
  - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.
- C. Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not push in or turn by hand, don't try to repair it. Call a qualified service technician. Force or attempted repair may result in a fire or explosion.
- D. Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.
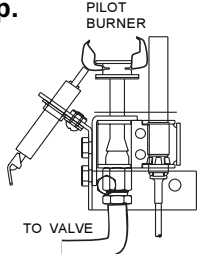
### OPERATING INSTRUCTIONS

1. STOP! Read the safety information above.
  2. Set the thermostat to lowest setting and turn appliance ON/OFF switch to "OFF".
  3. Turn gas control knob clockwise  until it stops at "OFF" position.
  4. Wait five (5) minutes to clear out any gas. If you then smell gas, STOP! Follow "B" in the safety information above. If you don't smell gas go to the next step.
  5. To find pilot—follow gas line from gas valve to pilot location.
  6. Turn knob on gas valve counterclockwise  to "PILOT" then push control knob all the way and hold down.
 
  7. Push the button of the sparker, repeating until confirming that pilot lights, by observing reflection on burner tray mirror.
  8. Continue to hold the control knob down for about one (1) minute after the pilot is lit. If it goes out, repeat steps 3 through 8.
    - If knob does not pop out when released, stop and immediately call your service technician or gas supplier.
    - If the pilot will not stay lit after several tries, turn the gas control knob to "OFF" and call your service technician or gas supplier.
  9. Turn gas control knob counterclockwise  to "ON".
  10. After replacing control compartment access panel, set thermostat to desired setting and turn appliance ON/OFF switch to "ON". Valve has built-in delay before coming on.
  11. If the appliance will not operate, check that the filter pump is on, that the filter is clean and water is flowing to the pool. Otherwise, follow the instructions "To Turn Off Gas To Appliance" and call your service technician or gas supplier.
- 

### TO TURN OFF GAS TO APPLIANCE

1. Set the thermostat to lowest setting and turn appliance ON/OFF switch to "OFF".
2. Turn gas control knob clockwise  until it stops at "PILOT". Then press down slightly on knob while turning clockwise  to "OFF". Do not force

### 3.2 Lighting and Shutdown Procedures (See page 8)

**NOTE:** If your LP cylinder runs out of fuel, turn off gas at the heater. After the cylinder is refilled, the heater must be relit following the instructions found on the heater. **DO NOT** attempt repairs on the gas control or heater. Tampering is dangerous and voids all warranties.

### 3.3 Setting the Temperature Control

The temperature control (see Figure 6) is calibrated at the factory and covers a range from approximately 70°F to 104°F (21°C to 40°C). Use an accurate pool thermometer to determine the best water temperature for your uses.

**IMPORTANT:** The temperature controls cannot be calibrated in the field. If the control is faulty, shut down the heater and have a qualified service technician replace the control. **DO NOT** use the thermostat switch to completely shut down the heater.

### 3.4 Seasonal Care

#### Caution

Do not operate this heater outdoors at temperatures below 20 degrees Fahrenheit (°F) (-7 degrees Celsius [°C]).

#### 3.4.1 Spring and Fall Operation

During periods when the pool is only going to be used occasionally, turn the temperature control down to the MIN setting. This prevents the pool from water from becoming chilled, and minimizes the time required to raise the pool water back up to the desired temperature.

In areas subject to only short freeze periods, turn off the heater and run the pump continuously for the length of the freeze period.

If the heater is not going to be used for a long period of time, shut it down completely. Follow the instructions found on the inside of the heater, or page 8 of this manual.

#### 3.4.2 Winterizing

In areas where freezing temperatures occur in winter, and the pool or spa will not be used, it is best to store your heater in a dry environment such as a shed or garage. Perform the following steps:

1. Shut down the heater following the shutdown instructions found on the heater.
2. Turn off the main gas supply valve to the heater, outside the heater jacket.

3. Disconnect the heater from the gas line and cover the end of the gas line to prevent debris from entering the pipe.
4. Disconnect the water connections at the reducing adapters on the header.
5. Allow the water to drain from the heater.
6. Store the heater in a dry place until its next use.

In milder climates where freezing does not occur, but the pool will not be used for an extended period, follow these steps:

1. Shut down the heater following the shutdown instructions found on the heater.
2. Turn off the main gas supply valve to the heater, outside the heater jacket.
3. Drain the water from the system.
4. Cover the heater and other components with a tarp.

#### 3.4.3 Spring Start-up

1. Secure all connections as discussed in the installation section of this manual.
2. Turn on the filter pump and circulate water until the water is clean. Check for leaks while circulating.
3. Turn on the main gas supply valve to the heater, outside the heater jacket.
4. Turn on the heater following the lighting instructions found on the heater, or page 8 of this manual.

### 3.5 Swimming Pool Energy Saving Tips

Water Pik Technologies offers the following recommendations to help conserve fuel and minimize the cost of operating your pool heater without sacrificing comfort.

1. The American Red Cross recommends a maximum water temperature of 78°F (25°C). Use an accurate pool thermometer. A difference of 4F° (3C°), between 78°F and 82°F (25°C and 28°C), will use as much as 40% more gas.
2. Carefully monitor the water temperature of your pool in the summertime. You can reduce heater usage due to warmer air temperatures.
3. Find the proper setting on the pool heater temperature control and use the TEMP-LOK to discourage further adjustments.

4. Set the filter time clock to start the pump no earlier than 6:00 AM during the pool heating season. This is the time when nightly heat loss balances.
5. If the pool is only going to be used on weekends, reduce the heater temperature control setting by 8 or 10 degrees during the week. Reset it to the 78°F (25°C) level a day or so before you plan to use the pool.
6. During the winter or when on vacation for longer than a week, shut down the heater by following the shutdown instructions found on the inside of the heater.
7. Where possible, shelter the pool from prevailing winds with well-trimmed hedges or other landscaping, cabanas, or fencing.
8. Always use a pool cover when practical. Besides providing a valuable safety feature, a pool cover will reduce heat loss, conserve chemicals, and reduce the load on filter systems.

### 3.6 Periodic Inspection

#### 3.6.1 Owner Inspection

Water Pik Technologies designs and constructs the Jandy Hot Shot heater to provide long performance life when installed and operated properly under normal conditions. The following basic guidelines are suggested for your inspection:

1. Keep the top and surrounding area of the heater clear of all debris.
2. Keep the heater area clean and free of all combustible materials, flammable liquids and vapors, as well as sanitization chemicals.
3. Do not use the heater if any part has been under water. Immediately call a qualified professional technician to inspect the heater and replace any part of the control system which has been submerged.

N'utilisez pas cet appareil s'il a été plongé dans l'eau, même partiellement. Faites inspecter l'appareil par un technicien qualifié et remplacez toute partie du système de contrôle et toute commande qui ont été plongés dans l'eau.

4. Be sure all combustion air and ventilation openings are not blocked.

## SECTION 4. Parts List for Hot Shot Heater

### 4.1 General Information

To purchase parts for the Jandy Hot Shot heater, contact your nearest Jandy dealer or distributor. If they cannot supply you with what you need, contact the Customer Service Manager, Water Pik Technologies, Telephone (707) 776-8200 extension 245.

#### Caution

Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation.

#### Attention

Au moment de l'entretien des commandes, étiquetez tous les fils avant de les débrancher. Des erreurs de câblage peuvent entraîner un fonctionnement inadéquat et dangereux.

Verify proper operation after servicing.


S'assurer que l'appareil fonctionne adéquatement une fois l'entretien terminé.

### 4.2 Parts List

The following page shows an exploded view to aid in parts identification. Please refer to this page when ordering parts for your Jandy Hot Shot heater.

Key No	Description	Order Part No.
<b>GASSYSTEM</b>		
1	Burner Tray Assembly, Natural Gas	R0367800
1	Burner Tray Assembly, LP Gas	R0367900
2	Gas Valve, Natural Gas	R0368000
2	Gas Valve, LP Gas	R0368100
3	Pilot Assembly, Natural Gas	R0368200
3	Pilot Assembly, LP Gas	R0368300
4	Pilot Generator	W0036900
<b>ELECTRICALSYSTEM</b>		
5	Thermostat Assembly	R0367700
6	On/Off Switch	R0099800
7	Temperature Control Knob	R0010700
8	Stop Plate, "Temp:-Lok"	10583100
9	High Limit Switch, 135°F	R0368400
10	High Limit Switch, 150°F, (Not shown)	R0368500
11	Pressure Switch, 2 PSI	R0013200
12	Fusible Link	R0012200

4.3 Exploded View

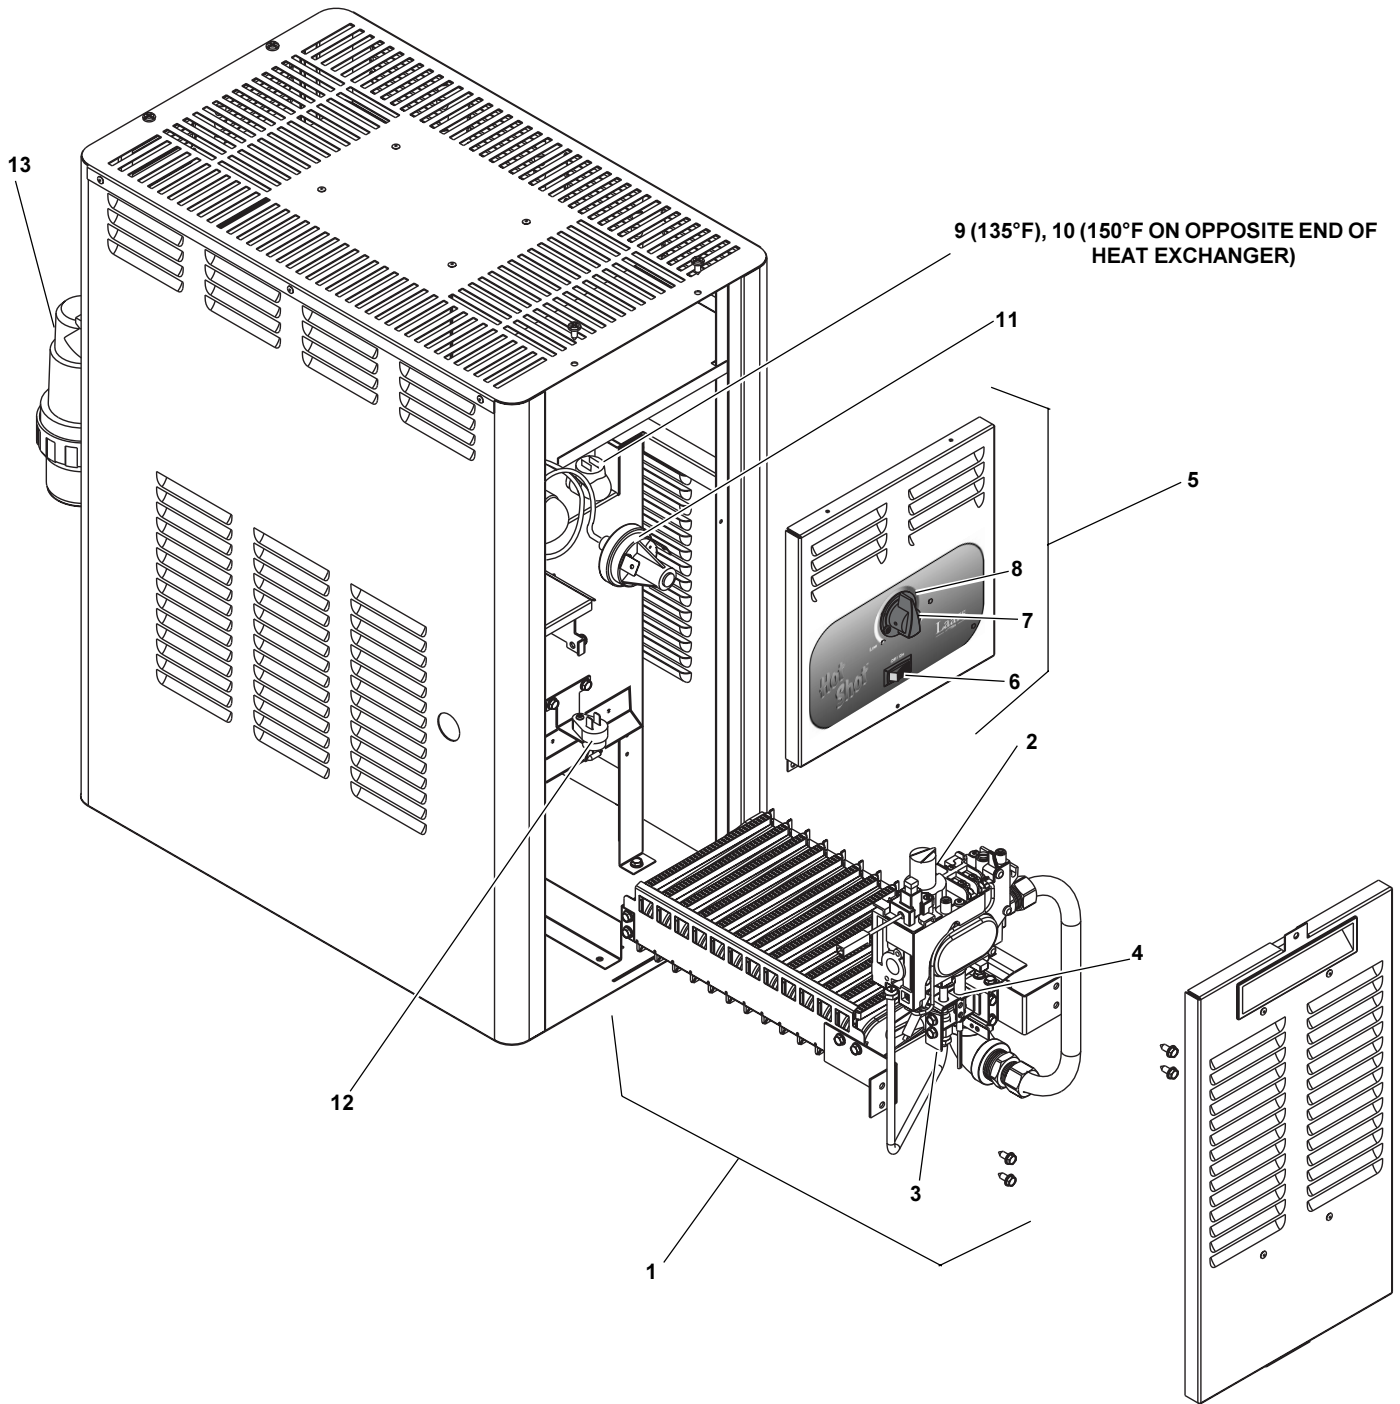

Key No	Description	Order Part No.
--------	-------------	----------------

**WATERSYSTEM**

13	I/O Header Assy	R0368600
14	O-ring set, I/O Header (Not Shown)	R0386100

**OPTIONAL (Not Shown)**

15	Propane Tank Accessory Kit	R0368800
16	External Bypass for Hot Tub/Spa	R0369400
17	Touch-up Spray Paint, Pewter	X0022700





# LIMITED WARRANTY

Thank you for purchasing Jandy® pool and spa products. Water Pik Technologies (manufacturer of Jandy products, including Laars® pool and spa heaters) warrants all parts to be free from manufacturing defects in materials and workmanship for a period of one year from the date of retail purchase, with the following exceptions:

- AquaLink® RS units installed with Jandy Surge Protection Kits will be covered for two years.
- NeverLube® valves are warranted for the life of pool and/or spa on which they were originally installed.

This warranty is limited to the first retail purchaser, is not transferable, and does not apply to products that have been moved from their original installation sites. The liability of Water Pik Technologies shall not exceed the repair or replacement of defective parts and does not include any costs for labor to remove and reinstall the defective part, transportation to or from the factory, and any other materials required to make the repair. This warranty does not cover failures or malfunctions resulting from the following:

1. Failure to properly install, operate or maintain the product(s) in accordance with our published Installation, Operation and Maintenance Manuals provided with the product(s).
2. The workmanship of any installer of the product(s).
3. Not maintaining a proper chemical balance in your pool and/or spa [pH level between 7.2 and 7.8, Total Alkalinity (TA) between 80 to 120 ppm, Total Dissolved Solids (TDS) less than 2000].
4. Abuse, alteration, accident, fire, flood, lightning, rodents, insects, negligence or acts of God.
5. Scaling, freezing, or other conditions causing inadequate water circulation.
6. Operating the product(s) at water flow rates outside the published minimum and maximum specifications.
7. Use of non-factory authorized parts or accessories in conjunction with the product(s).
8. Chemical contamination of combustion air or improper use of sanitizing chemicals, such as introducing sanitizing chemicals upstream of the heater and cleaner hose or through the skimmer.
9. Overheating, incorrect wire runs; improper electrical supply; collateral damage caused by failure of O-Rings, DE grids, or cartridge elements; or damage caused by running the pump with insufficient quantities of water.

## LIMITATION OF LIABILITY:

This is the only warranty given by Water Pik Technologies. No one is authorized to make any other warranties on Water Pik Technologies' behalf. **THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY. WATER PIK TECHNOLOGIES EXPRESSLY DISCLAIMS AND EXCLUDES ANY LIABILITY FOR CONSEQUENTIAL, INCIDENTAL, INDIRECT OR PUNITIVE DAMAGES FOR BREACH OF ANY EXPRESSED OR IMPLIED WARRANTY.** This warranty gives you specific legal rights. You may also have other rights which vary by state or province.

## WARRANTY CLAIMS:

For prompt warranty consideration, contact your dealer and provide the following information: proof of purchase, model number, serial number and date of installation. The installer will contact the factory for instructions regarding the claim and to determine the location of the nearest designated service center. If the dealer is not available, you can locate a service center in your area by visiting [www.jandy.com](http://www.jandy.com) or by calling our technical support department at (707) 776-8200 extension 260. All returned parts must have a Returned Material Authorization number to be evaluated under the terms of this warranty.

H0244100C

# Jandy®



A Water Pik Technologies Company  
6000 Condor Drive • Moorpark, CA USA 93021 • 707.776.8200 • Fax 707.763.7785  
480 S. Service Road West • Oakville, Ontario, Canada L6K 2H4 • 905.844.8233 • Fax 905.844.2635

Litho in USA ©Water Pik Technologies 0401